



DMX Joker

D700

DMX Joker

This guide shows you how to set up the D700 in DMX Joker. All pictures provided were taken with DMX Joker Pro 1.8 but it is also applicable to most other DMX Joker versions.

All files mentioned in this guide can be found on the USB drive, in the Asparion Configurator installation folder or on our website.

If you are having trouble with anything in this guide, please contact us via our website www.asparion.de/contact and we'll immediately help you.


Step 1:

- **Select the Midi CC preset**

How to select a preset is described in the main manual.


Step 2:

- Open DMX Joker
- Click on **Tools->Options**

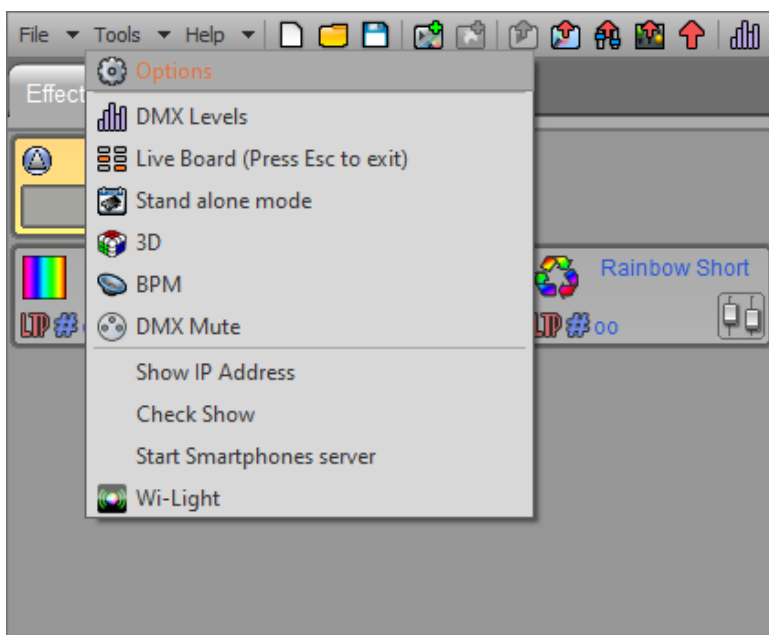


Step 3:

- Activate the **D 700** Midi input / output

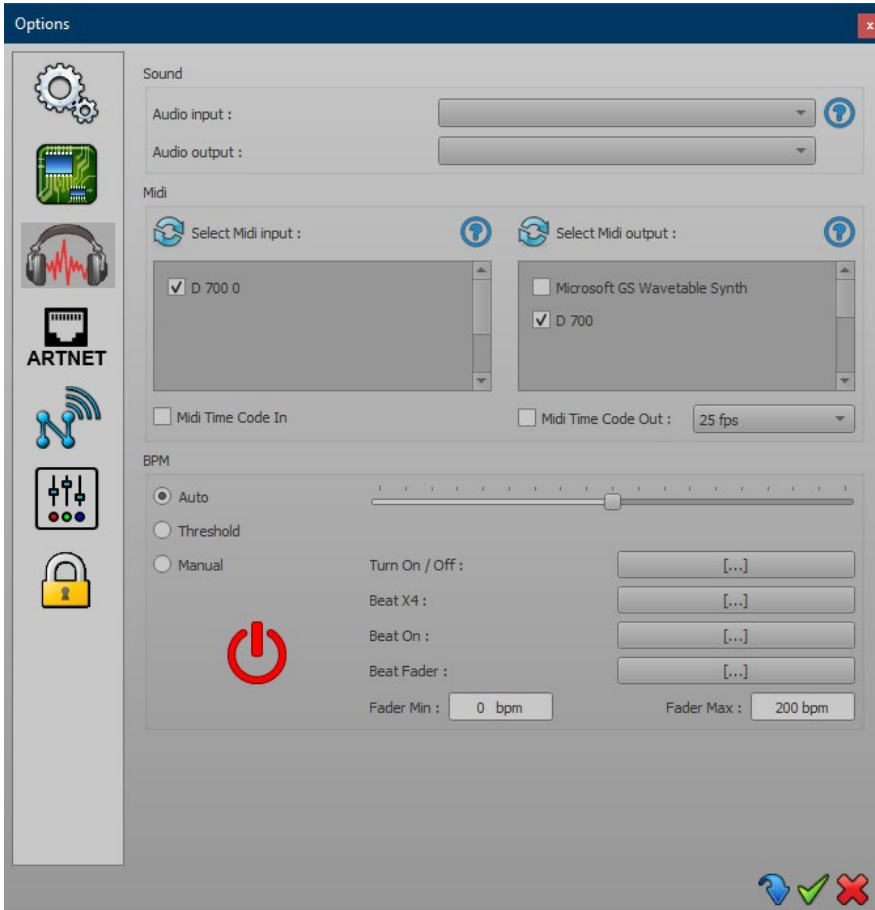


Step 4:

- You can assign Global functions in the window shown below

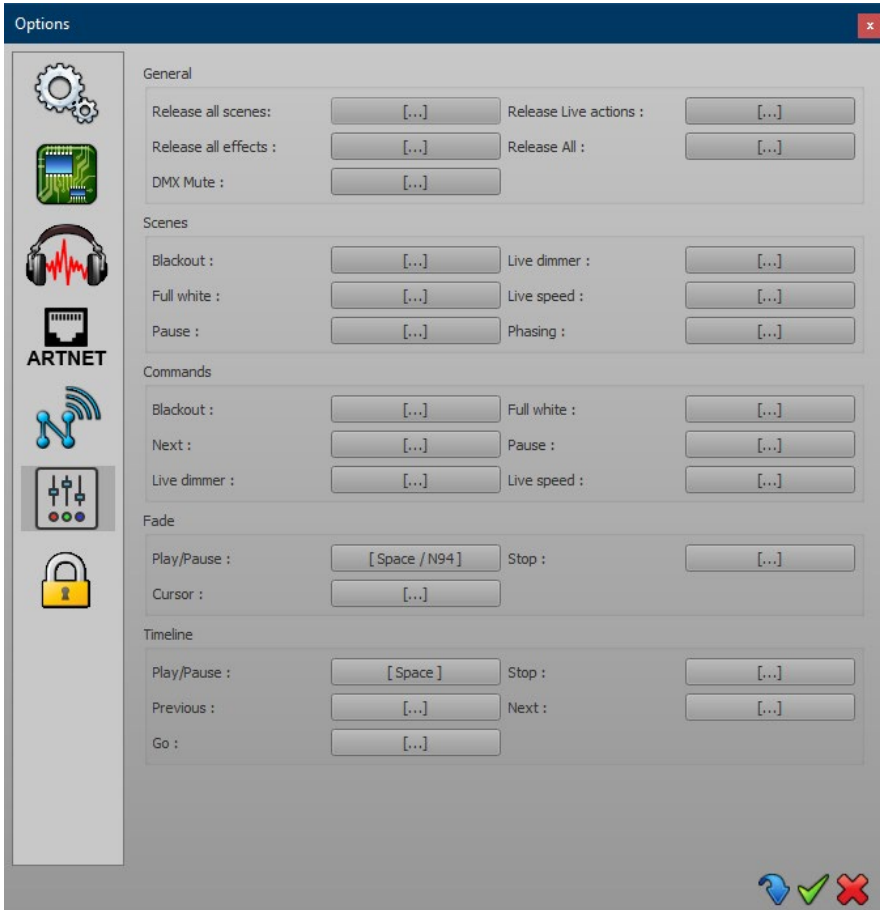

Step 5:

- Additionally, you can assign a lot of controls. To do that click the ... button next to the element. Then move or press a knob on the D700 to assign it to the element. Make sure **Feedback** is activated

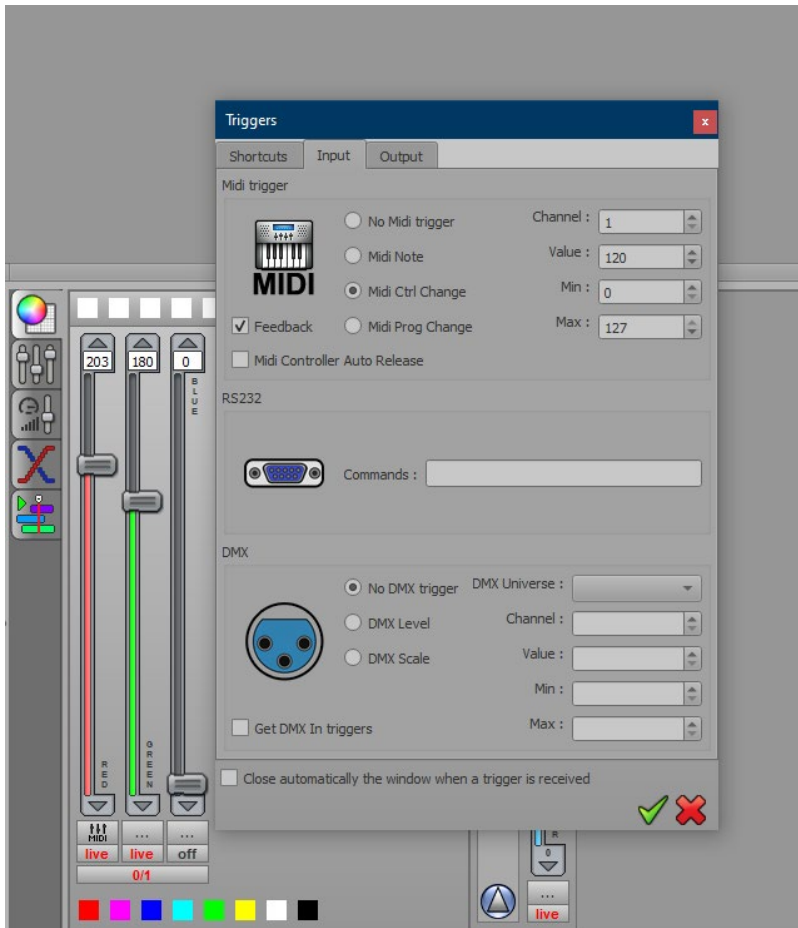

Hints:

- When connected properly the faders will move with the controls in the program, the led rings will show feedback and the buttons will light up



For more information
visit www.asparion.de